

Lawn Roller Instruction Manual



After Sales Support
Call 0871 911 7031
Email
customerservice@gardengearonline.co.uk
Product Code D3960

Thank you for purchasing this product, which has been made to demanding high quality standards and is guaranteed for domestic use against manufacturing faults for a period of 12 months from date of purchase.

For correct usage, please read these instructions carefully before use and keep in a safe place for future reference.

General information and safety warnings


- Remove all packaging and make sure that the product is intact. Do not leave packaging materials like bags and staples within the reach of children and pets.
- Read through these instructions fully before using the product.
- Only suitable for use with cold tap water or sand. Not suitable for use with any other liquids.
- Regularly inspect the fixings for signs of wear.
- When the product is no longer needed, drain it of any remaining water and allow it to air dry.
- Store in a cool, dry place away from direct sunlight.
- Do not use the product for anything other than its intended use.
- Do not attempt to repair, disassemble or modify the product.
- Do not let children play with this product.
- Do not try to lift the lawn roller once filled as it will be very heavy.
- Wear closed in, solid shoes with a good grip.
- Never use the roller up and down hills, always work horizontally across hills and slopes.
- If freezing conditions are due, empty the lawn roller and store away.
- Not suitable for commercial purposes.

Description of parts



Assembly

1. Connect the upper and lower handles together using the nuts, washers and bolts included.

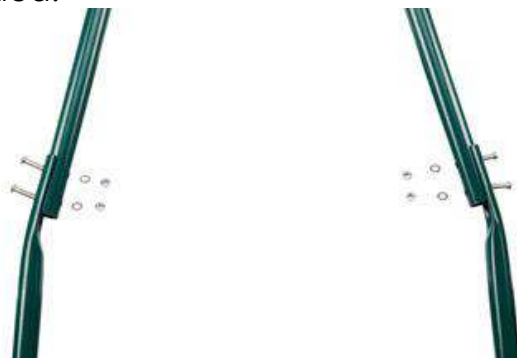

2. Attach the handle to the roller drum using the screws.



3. Attach the debris collection bar onto the lower handle using the screws included.



Instructions for use

1. Once all the parts are assembled and secure, you can then fill the drum with water or sand.
2. Have the lawn roller where you want to start work, once it is filled it will be very heavy. Open the refill hole and put a funnel in. Then slowly fill the drum with either sand or water until it's full. Then securely put the plug back into the hole.
3. When you are ready to start work, slowly push the roller in the direction you wish to travel. If the roller picks up any debris, the debris collection bar will prevent this from being rolled onto the lawn. Remove any debris from the bar if it collects there.

Care and maintenance

- If you are not going to use the lawn roller for a while, empty it of any water and store away. If you have used dry sand inside the drum, then you do not need to worry about emptying this.
- To clean the lawn roller, wipe over with a soft damp cloth and allow to dry naturally.

GUARANTEE IMPORTANT

Please do not return this product without first calling the Customer Service number below:

0871 911 7031*

Thank you for purchasing this product, which has been made to demanding high quality standards and is guaranteed for domestic use against manufacturing faults for a period of 12 months from the date of purchase.

Register your product for an extended 2-year warranty by visiting our website www.gardengearonline.co.uk. The product must be registered, along with your contact information, within 30 days of purchase. For full terms and conditions please visit our website.

This guarantee does not affect your statutory rights. If your product fails due to a defect in material or workmanship during this period, please return it to the place of purchase. Normal wear and tear is not covered under the guarantee.

Any guarantee is invalid if the product has been misused or subject to neglect or an attempted repair other than by our own service centre.

Due to continuous product improvement, we reserve the right to change the product specification without prior notice.

After Sales Customer Service:

Branded Garden Products Ltd, Premier House, Hortonwood 7, Telford, TF1 7GP

Telephone: 0871 911 7031*

E-mail customerservice@gardengearonline.co.uk

Please retain for future reference.

Colours and contents may vary.

*Calls cost 13p per minute plus your phone company's access charge